




## POWER MANAGEMENT MODULE (PMM) WIRING

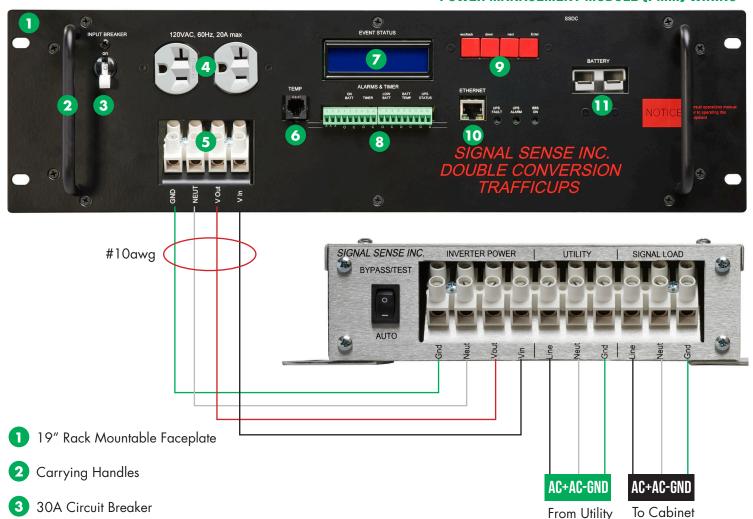

4 Convenience Outlet

5 Inverter Power Block

6 Battery Temperature Sensor

7 LCD Event Status Screen

8 Alarm & Timer Terminal Block

Programmable Keypad

10 Ethernet Port

Anderson Battery Connector

WARNING: Make sure utility power and breaker on inverter are off before installing. Connect wires from inverter first and then to Power Management Module (PMM). If stranded wires are used ferules or equivalent crimping terminals may be used. Screw Tightening Torque: UL: 16.0 Ifbin



**trafficups.com** 866.586.8877